


EU 160

EU 160 HWT

*Lubricated vane
vacuum pump*

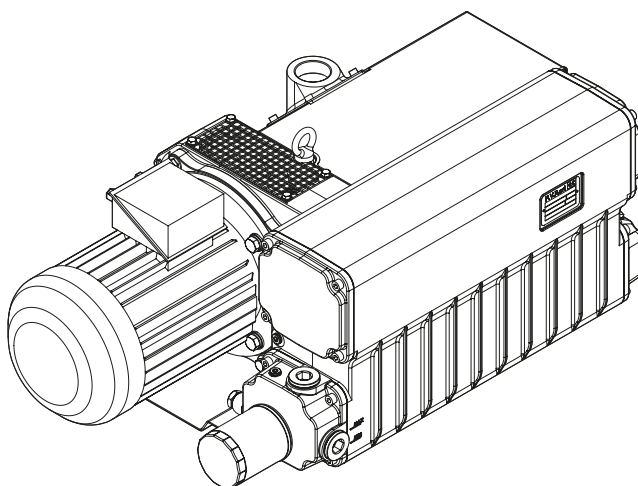

Operating and maintenance instructions

Publication Number:
LI 2333.04 April 2021


Index

1. General information	page 3
2. Product specifications	page 4
2.1 Pump description	page 4
2.2 Expected use	page 5
2.3 Forbidden use	page 5
2.4 Protections	page 5
2.5 Accessories	page 5
3. Safety rules	page 6
4. Transport/handling	page 8
4.1 Lifting	page 8
4.2 Unpacking and components control	page 8
4.3 Storage	page 8
5. Installation and operation	page 9
5.1 Assembly	page 9
5.2 Operating vacuum range changing	page 10
5.3 Location	page 11
5.4 Connection to the machine	page 12
5.5 Discharge air pipe line installation	page 12
5.6 Electrical connection	page 13
5.7 Commissioning	page 14
5.8 Tips for using	page 14
5.9 Water vapour intake	page 15
6. Servicing	page 15
6.1 General information	page 15
6.2 Oil change	page 16
6.3 Coupling elastic element replacement	page 17
6.4 Exhaust filters replacement	page 18
6.5 Spares necessary for normal servicing	page 18
6.6 Pump overhaul	page 18
6.7 How to order spare parts	page 18
7. Lubricants	page 19
8. Decommissioning	page 19
9. Return for repair	page 19
10. Disposal	page 20
11. Troubleshooting	page 21
Attachments	
Technical data sheet, exploded view and parts list (RDT)	
EC declaration of conformity (DC)	
Electric motor operating instructions	
Instructions for the accessories	

1. General information

This manual contains information necessary for the proper operation of the pump in order to prevent unsuitable use and for the safety of the operators. Do not attempt any other type of operation without having first contacted our **Service Department**. The information provided herewith does not intend to replace, integrate or change any rules, regulations, law by decree, directive or law of specific character in force in the Country where the installation takes place.

The suggestions given to the staff engaged in the installation and servicing assumes that the personnel is expert and prepared in facing any problem of servicing, both mechanical and electrical. For any questions or information not included in this manual, please contact our Service Department, always providing: model (Model), serial number (Serial), year of manufacture, stated on the pump name plate.

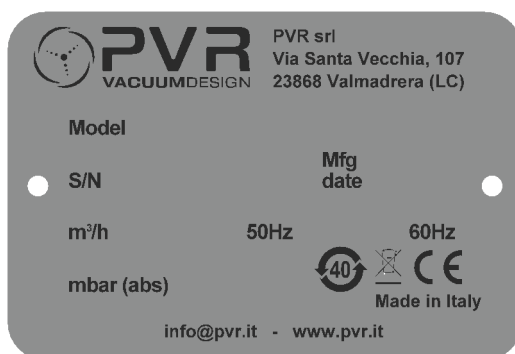

Symbols used:



WARNING:
Instructions that, if not followed,
could result in serious
personal injuries.



NOTE:
Instructions that, if not followed,
could result in pump damages.



HOT SURFACES



**HARMFUL SUBSTANCES
EMISSIONS**



**DO NOT DISPOSE INTO
THE ENVIRONMENT**



ELECTRIC SAFETY



FIRE HAZARD



**READ THE OPERATING
INSTRUCTIONS**



INLET PORT



EXHAUST PORT



DISPOSAL

2. Product specifications

2.1 Pump description

EU 160 pumps are single-stage, rotary vane lubricated vacuum pumps, with oil recirculation.

The flanged electric motor is coupled by means of an elastic coupling.

Cooling is achieved by means of an air/oil cooler and a centrifugal fan.

At the pump inlet there is a mesh filter in order to protect it from solid parts having diameter larger than 1.5 mm.

Furthermore, an integrated non-return valve prevents the oil coming back and the return of air in the chamber to be pumped down during the stop phase.

In the tank there is a system of oil smokes separation from the discharged air (maximum residual 2PPM/weight corresponding to 2.4 mg/m^3).

The separated oil is recovered automatically by the pump.

The gas ballast valve prevent condensation inside the pump when pumping down small quantity of vapour.

2.2 Expected use

These vacuum pumps have been designed to handle air and small quantity of water vapour only. They are suitable to evacuate closed systems or to operate at a constant vacuum within the following vacuum range:

EU160 from 0.5 to 350 mbar (absolute)
EU160/B from 10 to 850 mbar (absolute)

The ambient temperature and the inlet temperatures must be included between 12° and 40°C.

In case you get temperatures outside this range, please get in touch with us.

Handling of other types of gas or vapours must be declared in advance to PVR that will give the conformity to the specific use.

2.3 Forbidden use



WARNING:

The pump MUST NOT handle:

- liquids or solid substances;
- dangerous, explosive or aggressive gases and vapours;
- pure oxygen or air mixtures enriched with oxygen;

It is forbidden to use the discharge of the pump to create even limited pressures.



WARNING:

It is forbidden to install the pump in a potentially explosive environment.

2.4 Protections

The pump must be protected against suction of dust, solids or liquids.

For those applications where such a protection is not ensured, a vacuum gauge must be installed on the oil tank for a visual check of the exhaust filter clogging.

In order to get an automatic pump stop, a pressure switch set at 0.6 bar can be installed. The pump is supplied without electric control panel. The electric motor must be protected according to the regulations in force.



WARNING:

In case of applications where the pump stop or failure can cause damages to people or things, safety measures for the system must be adopted.

2.5 Accessories

The following accessories useful for the installation and for the control of the operation parameters of the pump are available:

- external inlet filter
- connection fittings
- vacuum meters/ vacuum switches
- pressure meters/ pressure switches
- temperature switch
- low oil level switch

3. Safety rules



WARNING:

Despite of all the precautions adopted when designing the equipment, there are some risk elements that arise during operation and servicing.



HOT SURFACES

The temperature of the pump surfaces may exceed 80°C.

Install the pump in a protected area accessible only by authorized personnel, to prevent possible personal injuries due to contact with hot surfaces.

The pump can be placed inside other machines by adopting the necessary safeguards. Before carrying out any maintenance on the pump, be sure the pump is cold.



HARMFUL SUBSTANCES EMISSIONS

The discharged air contains part of traces of oil mist.

Check the compatibility with the environment.

Make sure a correct air change is allowed otherwise convey the pump discharge outside. A failure or the seals wear can cause an oil leakage.

Avoid the dispersion to the ground and the pollution of other materials. In case that any air containing dangerous substances must be pumped down (for example, biological or microbiological agents), make sure to adopt filtering systems before introducing air in the work environment.

Used discharged oil from the pump must be disposed in accordance with the regulations in force in the Country of use.



Do not dispose into the environment.

HAZARD CAUSED BY VACUUM

Any contact with parts under vacuum can cause injuries.

Avoid any contact with the pump inlet port during the pump operation. Introduce air in the inlet circuit before every operation cycle.

HAZARD CAUSED BY PRESSURE

The pump tank is pressurized. Do not open the oil filling and discharge plugs during operation.

FOR A SAFE MAINTENANCE

All maintenance operations must be carried out with the pump idle, disconnected from the electrical supply, with the pump cold, vented to atmospheric pressure. Prevent unexpected start-up (e.g. block the power switch with a personal lock).



ELECTRIC SAFETY

Some components of the electric equipment are electrically charged during operation. Any contact may cause serious injuries to persons or objects.

Connection and control of the electric system must be carried out by skilled personnel only.

The electrical equipment must comply with the EN 60204-1 standard and with any other law in force in the Country of use.

Besides, electrical equipment must comply with EN 61000-6-4 and EN 61000-6-2 standards concerning electromagnetic compatibility and electromagnetic immunity for industrial environment.



FIRE HAZARD

WARNING! The use of the pump in situations unforeseen or not recommended by this manual, as well as lack of correct maintenance, may create high risks for overheating or fire.

In case of a fire do not use water to extinguish but use a powder CO₂ extinguisher or other means compatible with the electrical equipment and lubricating oil.

4. Transport/handling

4.1 Lifting

The orientation of the packed components must correspond to the instructions given by the pictograms on the external covering of the packaging.

For unloading use a lifting equipment suitable for the pump weight.

For lifting the packaging and the pump, please refer to the figures here below.



Pump packaged (Figure 1)

Pump with motor (Figure 2).

Pump without motor (Figure 2).

	L	B	H
Packing size	930 mm	490 mm	410 mm

EU 205	Pump	Packaged pump
Weight of the pump with motor 50Hz	104 Kg	114 Kg
Weight of the pump with motor 60Hz	110 Kg	120 Kg
Weight of the pump without motor	75 Kg	85 Kg

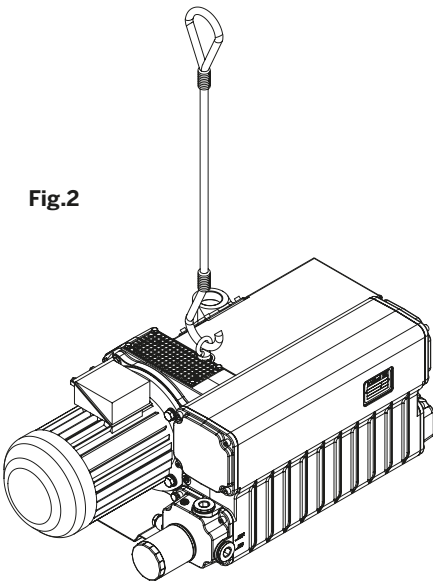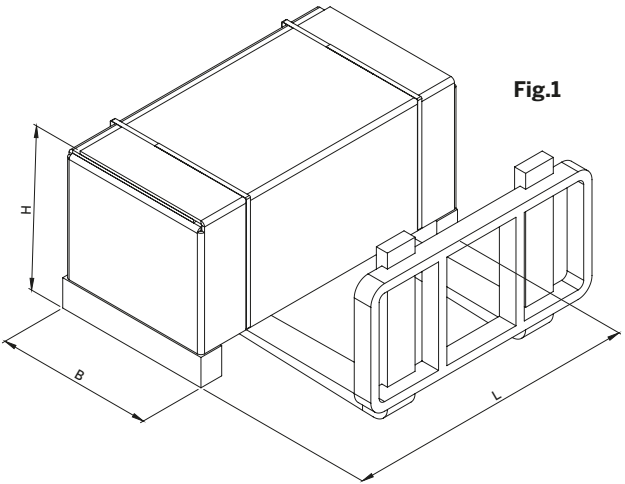

4.2 Unpacking and components control

When receiving the machine, check that the packaging is intact or shows any signs of damages occurred during transportation. If there is no damage, proceed to the unpacking and check the machine further. In case of damages are found, inform immediately PVR and the carrier. A representative will contact you or it may be dispatched to the site to inspect and file full damage report.

4.3 Storage

The pumps must be stored or transported without oil and protected from the atmospheric agents at a temperature between -15°C and 70°C (normal humidity rate max. 95% non condensing).

5. Installation and operation

5.1 Assembly

If the pump is supplied without any electric motor, install a motor whose characteristics are the same as stated on the technical sheet, constructive form IM B 5.



WARNING:


- Use lifting equipment suitable for the motor weight (between 29 and 35 Kg depending on the versions)
- To assure the continuity of the equipotential circuit of the pump, clean the contact surfaces very well, by removing any grease or protective painting.



NOTE:

After the assembly, check that the distance between the two coupling halves is 20 ± 1.5 mm (Figure 4)


Fig.4

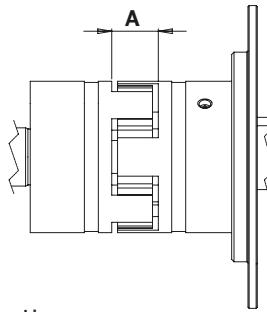

Remove inlet and exhaust plastic caps.

Fit the external filter in horizontal position to prevent dirt coming inside the pump during the cleaning of the cartridge. (Figure.5)

Fig.5

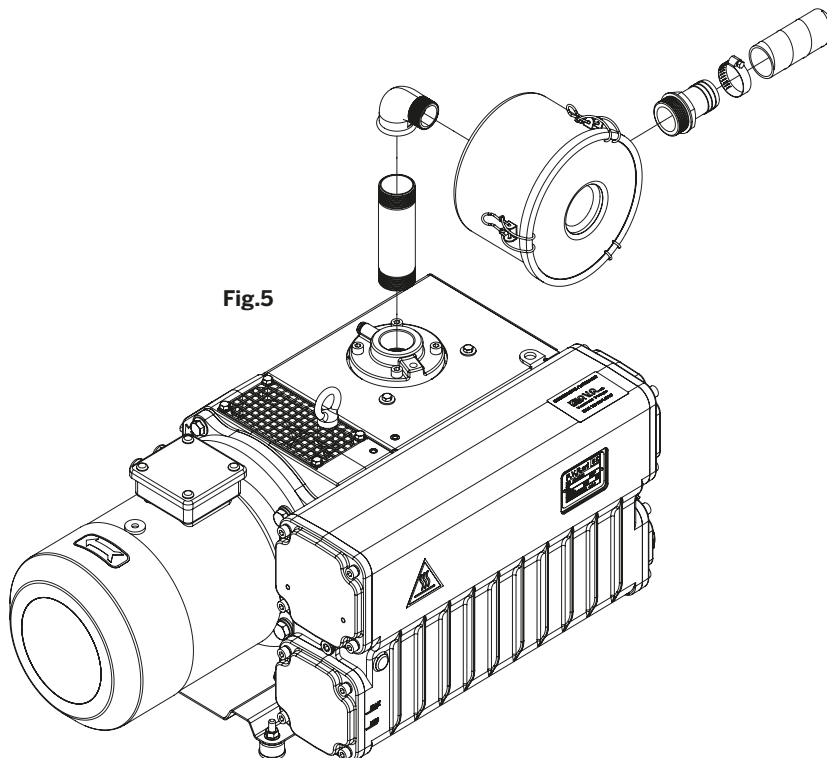

Operating and maintenance instructions

EN


5.2 Operating vacuum range changing

Pumps of EU205 - EU300 series are fitted with a manual selector switch for the choice of the suitable working vacuum range:

- EU from 0.5 to 300 mbar
- EU/B from 10 to 850 mbar

In case the pump working range needs to be changed, please follow the instructions. Remove the casing (Pos.89) by unscrewing the screws (Pos.52-92) to reach the tap (Pos.109).

Position the selector switch horizontal for the EU type, position it vertical for the EU/B one. The predetermined vacuum range is the one stated on the pump name plate.

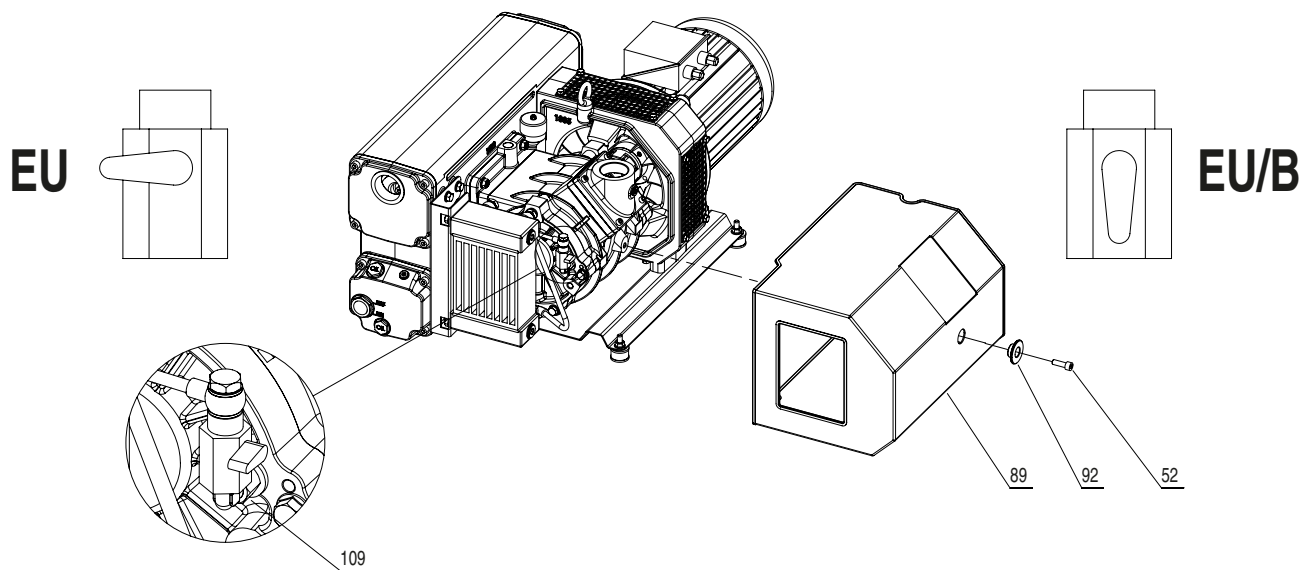

5.3 Location



WARNING:

- The pump must be installed in a protected area (see safety rules).
- It must be fastened with support feet on horizontal surface.
- It must be accessible for correct and easy maintenance, by respecting the minimum distances from possible obstructions (see figure 6).
- It must be accessible to suitable lifting equipment.



NOTE:

- Ensure the air exchange in the room or inside the machine where the pump has been installed.
To assure a sufficient cooling, avoid exceeding 40°C of ambient temperature.
- The pump must be protected against jets or sprays of water that may penetrate the tank through the exhaust port.
- Whenever the pump is installed outside, it must be protected against atmospheric agents and it must be used with an oil suitable for low temperature.
- Avoid warm air coming from the exhaust or the cooling fans causing discomfort to the personnel.
- Do not install the pump in a dusty area or where other materials may block or cover the cooling surfaces quickly.

A	B	C	D
300 mm	90 mm	100 mm	304 mm

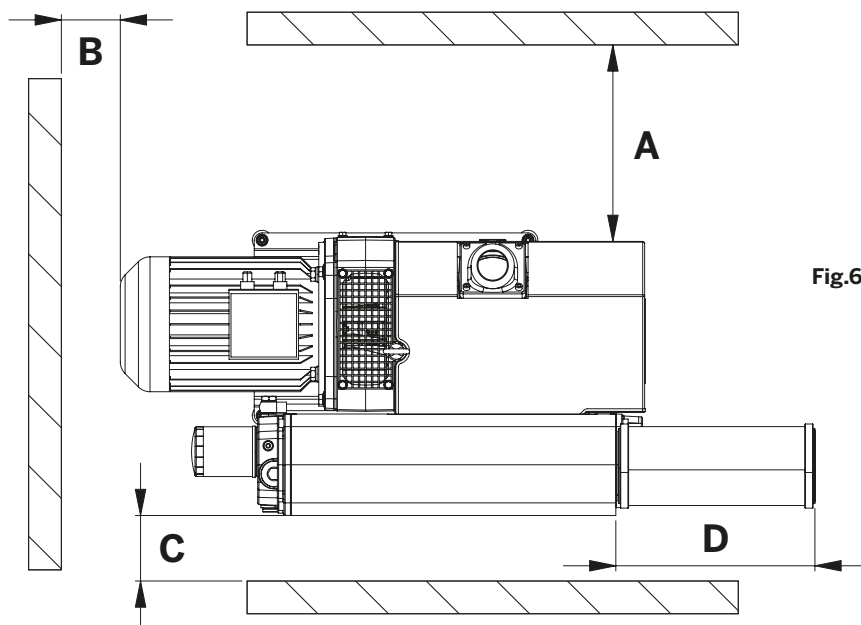


Fig.6

Operating and maintenance instructions

EN

5.4 Connection to the machine

The connection to the chamber to be pumped down must be carried out by means of pipes of the same diameter as the inlet port.
Pipe weights and expansions, if any, must not rest on the pump.
It is advisable to make the final connection to the pump inlet port with flexible pipes or fittings.
It is important that all the pipes and the different fittings are tight.
Very long or small diameter pipes decrease the pump performances.



This symbol identifies the inlet port.

For further information, please refer to the RDT attached herewith.

5.5 Discharge air pipe line installation

- If the pump has been installed in a room with poor air exchange, it is possible to pipe the pump discharge air to other rooms or outside.
- Use pipes with the same diameter as the tank discharge port with a maximum length of 15 m.
For longer pipes increase pipe diameter. Pipe weights must not rest on the pump.
In the final length use flexible pipes or pipe fittings.



NOTE:
this pipe must be descending, to avoid the condensate going back to the tank.



WARNING:
do not connect ball valves to this pipeline.



This symbol identifies the exhaust port.

For further information, please refer to the RDT attached herewith.

5.6 Electrical connection

- The control panel and electrical connections must be carried out by skilled personnel and conform to the EN 60204-1 rules or to other local regulations in the Country of use.
- The electrical equipment must comply with EN 61000-6-4 and EN 61000-6-2 standards concerning electromagnetic compatibility, emission standard and immunity for industrial environment.
- Check the main voltage and frequency in use to correspond to the data stamped on the motor name plate.
- The electric motor must be protected against overload. The full load amperage value on the motor name plate must be considered when sizing the electrical components and motor protection against overloading.
- Make sure the grounding is correctly done.
- Carry out the electric connection following the diagram shown on the motor terminal box.
- Check direction of rotation by starting the pump for a short time (2-3 seconds). The correct direction is shown by the arrow on the pump (figure 7). In case of wrong rotation, it is necessary to change the motor rotation by exchanging position of two of the three connections previously connected to the motor terminal box.

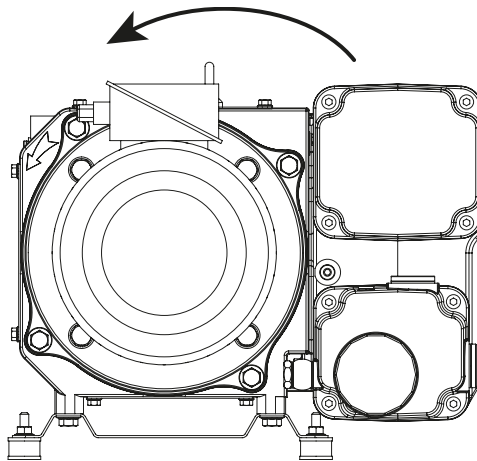


Fig.7

Operating and maintenance instructions

EN

5.7 Commissioning

The pump is supplied without lubricating oil.




NOTE:
the operation without oil causes big damages to the pump.

Carry out the first filling up through the plug (E) up to the half of the sight glass (F) and close the plug (E) (Figure 8).

Start the pump and take it to the maximum vacuum level for at least 2 minutes. Stop the pump, check again the oil level and add the lacking oil, if necessary, in order to get the correct oil level.



NOTE:
a quantity of oil greater than necessary may clog the oil separator and damage the pump or the electric motor.

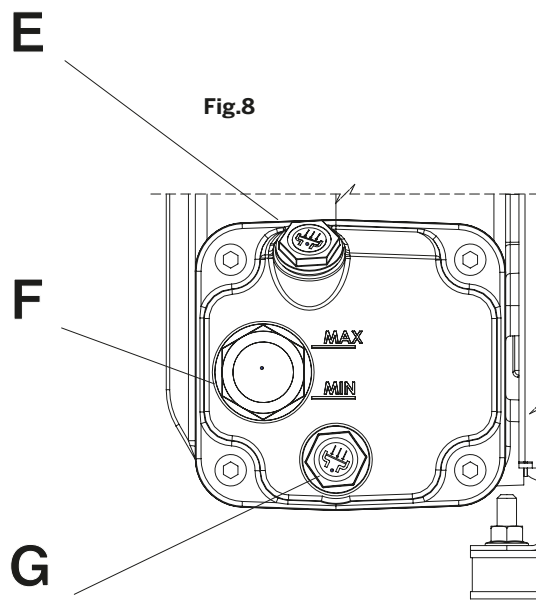

5.8 Tips for using

When the room temperature is lower than 10°C, it is a good practice to let the pump operate at the ultimate pressure (Inlet port closed, without load) for about 15 minutes. During this period the pump may not reach the stated pressure limits.



NOTE:
Avoid operating the pump for long periods with inlet port vented to atmospheric pressure.

Avoid frequent stop-starting, as this will lead to premature wear of the coupling elastic element.

It is recommended not to exceed 10 starting/hour. For more frequent starting, it is recommended to install a soft starter device.

5.9 Water vapour intake


In order to pump down any water vapour, the following operations are recommended:

Let the pump run for thirty minutes at the maximum vacuum in order to bring the pump temperature to its operating value.

At the end of the working cycle, in case of further presence of condensate in the oil, let the pump run for at least thirty minutes at the maximum vacuum.

It is advisable to carry out this operation before stopping the pump for a long time. The gas ballast valve will allow the elimination of water condensate from the lubricating oil.

6. Servicing

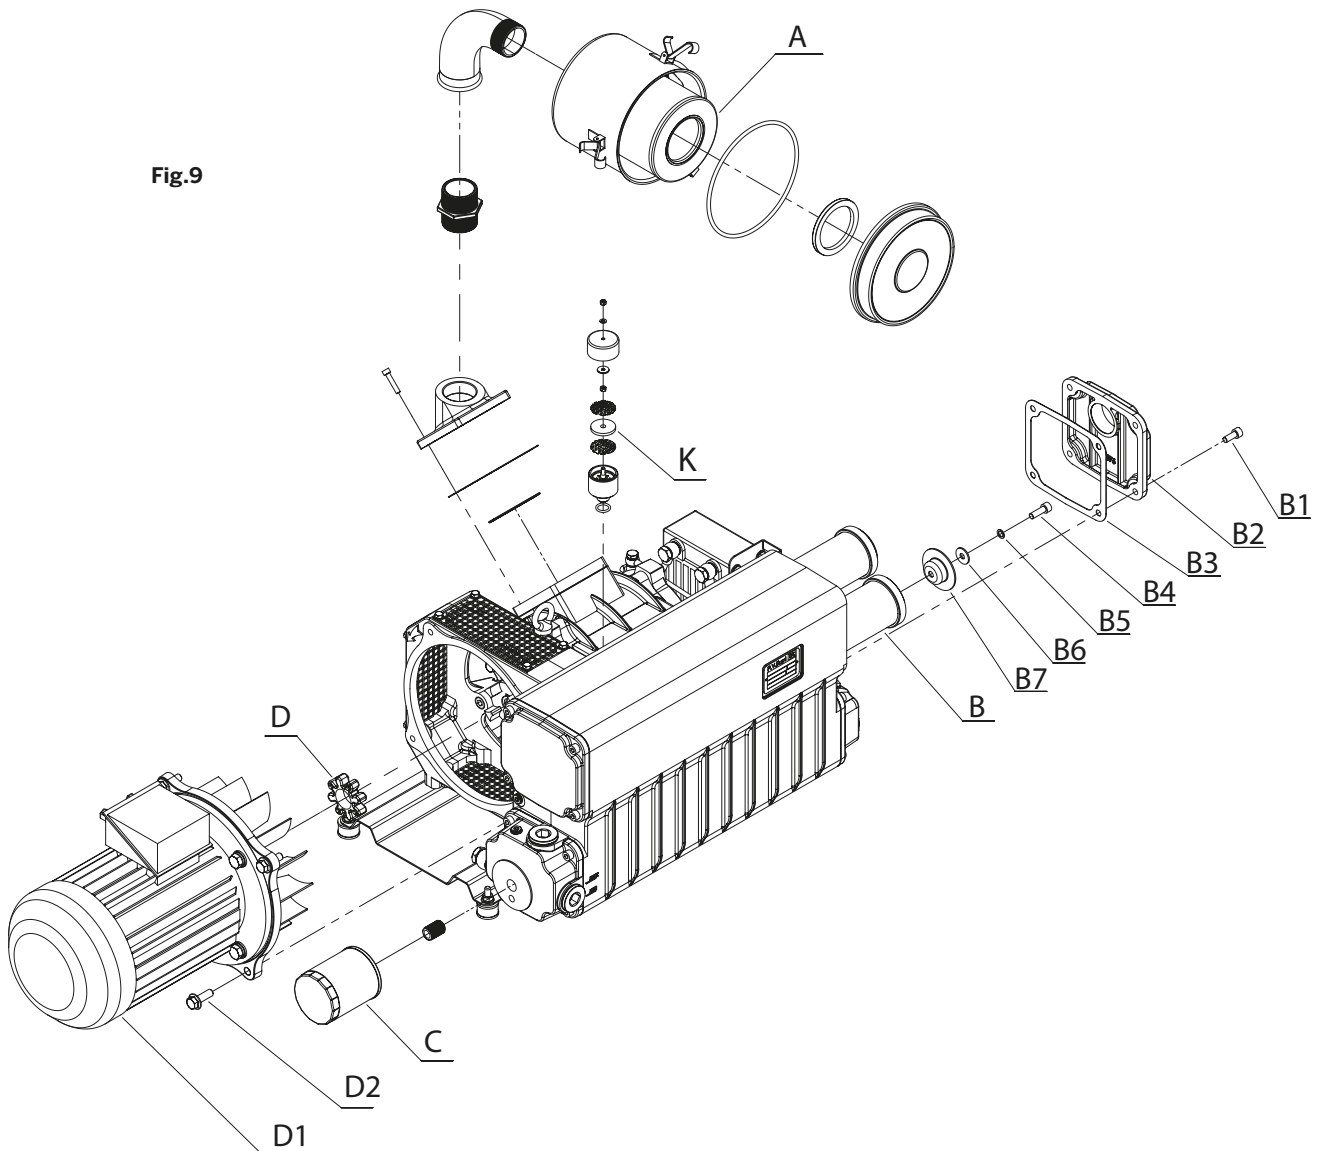

Operating and maintenance instructions

EN

6.1 General information

In order to keep the pump operating at a high efficiency level, it is mandatory to follow all periodical service points listed in the table below. However, more frequent service operations may be necessary depending on what the pump is used for (suction of condensable vapours, suction of powders or polluting substances). For such cases, only direct experience can indicate the correct service frequency needed. The exhausted oil and the replaced spare parts must be considered as special waste products and handled according to the local regulations in the Country of use.



WARNING:

Before every maintenance operation:

- Always ensure that the pump is insulated from the electrical network so that it can't start automatically.
- Wait until the pump gets cool and make sure it has reached a non-dangerous temperature.
- Introduce air in the inlet circuit.

SERVICING FREQUENCY	DESCRIPTION OF THE OPERATION	AUTHORIZED PERSONNEL
24 Hours/every day	Check oil level before starting.	Operator
100 Hours/every week	Clean the external inlet element with a blast of air (Figure 9 pos.A).	Operator
	Clean the cooling surfaces of the pump, of the oil cooler and of the electric motor with a blast of air.	Operator
500/1000* Hours/every 6 months	Change the lubricating oil (Figure 9 pos. C).	Skilled Worker
	If the pressure gauge is fitted to the pump, check the oil separator (max 0,6 bar), if necessary, replace it.	Skilled Worker
	Replace the gas-ballast felt disk (Figure 9 pos. K).	Skilled Worker
2000 Hours/every year	Replace the exhaust filters (Figure 8 pos.B).	Skilled Worker
	Check and if necessary replace the coupling elastic insert (Figure 9 pos. D).	Skilled Worker
	Check the electrical connections.	Skilled Worker
8000 Hours/every 2 years	Grease electric motor bearings (if there is the grease slinger). Please refer to the electric motor name plate and/or motor manual.	Skilled Worker
30000 Hours/every 5 years	Pump overhaul.	Customer Service

* The first oil change has to be done after 500 hours of operation. If any polluting substances are found in the oil, next oil change could take place within 1000 hours.

6.2 Oil change

For a correct operation, oil change should be performed when the pump is still warm.



WARNING:

Use protective gloves to avoid injury caused by heat.

Please refer to Figure 8, section 5.6. Unscrew the oil filling plug (E) and the discharge plug (G) only after having placed underneath the pump tank a suitable container (proper size and shape) for collecting the total quantity of oil.

Once the oil in tank has completely been discharged from the tank, reassemble both plugs ("E" and "G") and let the pump run under vacuum for about one minute, so that the lubricating/cooling line gets emptied and any oil residual keeps inside the pump. Then remove the plugs and discharge the rest of the oil.

If the oil is polluted or if some water is in the oil, clean the pump by letting it run with a suitable quantity of oil (up to the minimum level shown on the tank) at maximum vacuum level for at least 5 minutes.

Drain the oil again.

Replace the oil filter Figure 9 (pos. C) and follow up to fill with fresh oil (please see "commissioning" and "recommended oil table").

6.3 Coupling elastic element replacement

Please refer to Figure 9.

Remove the motor assembly (pos. D1) unscrewing the screws (pos. D2). Check the elastic element (pos. D) conditions. If necessary, replace it. Reassemble by means of the screws.



WARNING:

please use suitable lifting equipment.

Weight expected for the electric motor between 29 and 35 Kg depending on the versions.



NOTE:

the operation with damaged elastic element causes an anomalous pump noise, especially when starting the pump and may lead to coupling and pump shaft failure.

Operating and maintenance instructions

EN

6.4 Exhaust filters replacement

Very dirty exhaust filters may cause a considerable pump temperature increase and in extreme cases oil lubricant spontaneous ignition.

Maximum allowed pressure in the tank is 0,6 bar measured at the maximum capacity (when the pump is working with the inlet open to atmospheric pressure).

If a pressure gauge has been fitted to the tank, check the exhaust filter blockage with the pump warm.

To replace the filter, remove the cover (pos. B2) by unscrewing its screws (pos. B1).

Unscrew the screw (pos. B4), remove the washers (pos. B5-B6) and then the fixing cartridge disk (pos. B7).

Replace all the exhaust filters (pos. B) and their O Rings (pos. B8). Reassemble the fixing cartridge disk, the washers and tighten the screws.

Reassemble the discharge cover. If necessary, replace the gasket (pos. B3).

6.5 Spares necessary for the normal servicing

The recommended spares are shown in the list of the exploded drawing marked with the letter "R" (see RDT). They are contained in the minor spare parts kit.

6.6 Pump overhaul

For this operation please request the proper instructions and direct any questions to our Customer Service department. The overhaul consists of a complete disassembly, cleaning of all components as well as replacement of parts that are subject to wear (pump and motor bearings, vanes and gaskets).

6.7 How to order spare parts

When ordering spare parts, always state the pump model, serial number, year of production, electric motor characteristics (manufacturer's name, model, kW, V, Hz), position reference on the spare parts list, description and quantity needed.

Different types of maintenance kits are available (ref. RDT attachment).

7. Lubricants

Oil recommended for generic use		
Mineral oil for compressors according to DIN 51506 group VC-VCL or VDL classification ISO L-DAG.		
Ambient temperature	Viscosity	PVR oil
10 - 40°C	ISO 100	Rotant VF 204
5 - 15°C	ISO 68	Rotant VF 203

Oil recommended for heavy duty, both for high and low temperatures.		
Synthetic oil on PAO basis (polyalphaolefins).		
Ambient temperature	Viscosity	PVR oil
5 - 40°C	ISO 100	Rotant VF 304
5 - 20°C	ISO 68	Rotant VF 303

Oil recommended for application in the food industry.		
Synthetic oil lubricant compatible for chance contact with food complying with NSF USDA H1 specifications.		
Ambient temperature	Viscosity	PVR oil
5 - 40°C	ISO 100	Rotant VF 404 H1
5 - 20°C	ISO 68	Rotant VF 403 H1

For ambient temperature outside the stated range, please get in touch with our Customer Service Department.

8. Decommissioning

Drain the oil from the pump prior to the removal.
If the oil is polluted, flush the pump with fresh oil (see "oil change").
Drain the oil from the tank, plug the inlet and the discharge ports and store the pump without oil.

9. Return for repair

In case of pump return for repair to PVR, provide a list of substances which have come in contact with the pump and advise the risks involved in handling, if any. Drain the lubricant from the pump prior to shipping the pump back.

10. Disposal

Meaning of the “WEEE” logo found in labels

The following symbol is applied in accordance with the EC WEEE (Waste Electrical and Electronic Equipment) Directive.

This symbol (valid only in countries of the European Community) indicates that the product it applies to must NOT be disposed of together with ordinary domestic or industrial waste but must be sent to a differentiated waste collection system.

The end user is therefore invited to contact the supplier of the device, whether the Parent Company or a retailer, to initiate the collection and disposal process after checking the contractual terms and conditions of sale.



11. Troubleshooting

TROUBLE	CAUSE	REMEDY
Drop in performances	Inlet pipes or machine are leaking	Identify leaking point and seal it
	No lubrication	Check oil level and oil conditions. Fill with oil to the right oil level or change the oil and the oil filter
	Inlet filters are dirty	Clean or replace
	Blocked oil cooler	Clean or replace
Anomalous noise	No lubrication	See previous point
	Coupling element worn	Replace
	Motor or pump bearings damaged	Replace
	Damaged vanes	Replace
	Damaged contact surfaces	Pump overhaul at our workshop
Oil leak	Shaft oil seal rings worn	Replace oil seal rings
	Oil filling/discharge plugs are leaking	Check the plug has been closed / replace the gasket
	Inefficient oil recovery system	Check and clean oil recovery pipe
Motor protection is tripping	Blocked exhaust filters	Replace exhaust filters
	No lubrication	Oil level filling up
	Pump seizure and jam	Pump overhaul
	Broken vane	Replace vanes
Discharge oil mist	Inefficient exhaust filters	Replace exhaust filters
	High temperature due to polluted oil	Oil change
	High operating temperature due to high ambient temperature	Decrease room temperature by allowing a better air exchange
Oil is found in the inlet circuit	Inefficient inlet valve	Check the inlet valve is tight. Clean the valve and change any damaged parts



PVR Srl

HEADQUARTERS:


Via Santa Vecchia, 107 - 23868 Valmadrera (LC), Italy
T +39 0341 1918 51 - F +39 0341 1918 599
info@pvr.it - www.pvr.it

LOCAL UNIT:

Via IV Novembre, 104F
23868 Valmadrera (LC), Italy

EU 160

***Lubricated vane
vacuum pump***

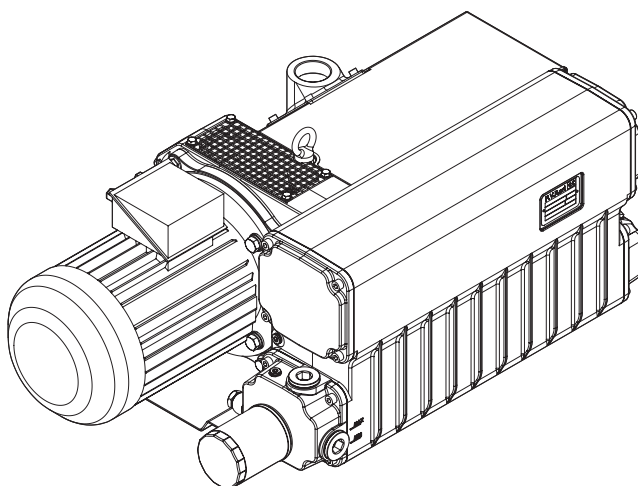


Technical data and parts lists

Publication Number:
RDT 2281.02 December 2017

Technical data and parts lists

ENG

EU160 – EU160/B

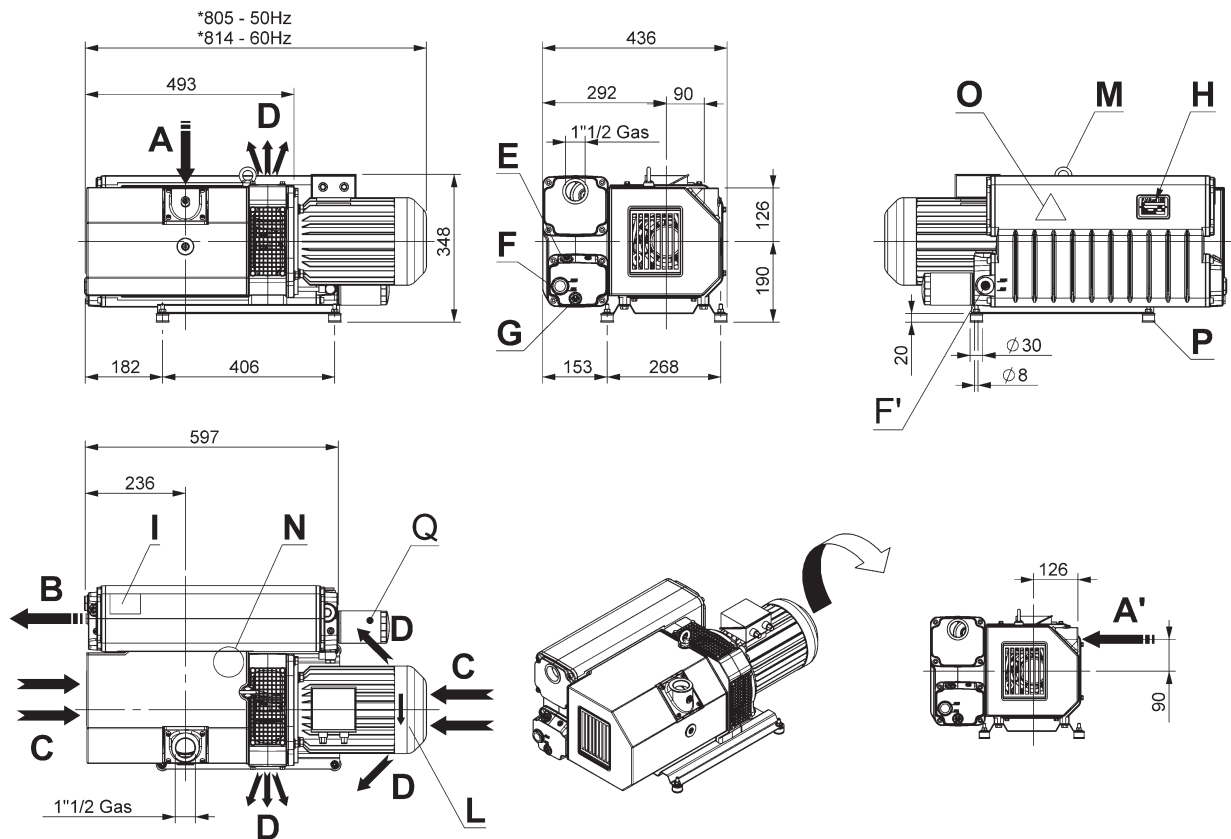

*Misure soggette a variazioni in funzione della marca del motore
 *Dimensions subject to changes depending on the motor brand
 *Données sujettes aux variations en fonction de la marque du moteur
 *Die Maße können aufgrund von Motorzeichen ändern
 *Medidas sujetas a variación en función de la marca del motor

	I	GB	F	D	E
A	Aspirazione verticale	Vertical inlet	Aspiration verticale	Senkrechter Einlass	Aspiración vertical
A'	Aspirazione orizzontale	Horizontal inlet	Aspiration horizontale	Waagerechter Einlass	Aspiración horizontal
B	Scarico aria	Exhaust	Sortie de l'air	Luftauslass	Salida de aire
C	Entrata aria raffreddamento	Cooling air inlet	Entrée air refroidissement	Kühluftseintritt	Entrada aire refrigeración
D	Uscita aria raffreddamento	Cooling air outlet	Sortie air refroidissement	Kühluftaustritt	Salida aire refrigeración
E	Tappo carico olio	Oil filling plug	Bouchon remplissage huile	Öleinfüllschraube	Tapón carga de aceite
F-F'	Spia livello olio	Oil level sight glass	Voyant niveau huile	Ölschauglas	Mirilla aceite
G	Tappo scarico olio	Oil drain plug	Bouchon vidange huile	Ölablass-Schraube	Tapón vaciado de aceite
H	Targhetta identificazione	Pump name plate	Plaque d'identification	Maschinenschild	Placa de identificación
I	Targhetta oli	Oil grade label	Plaque huiles	Ölempfehlungsschild	Placa tipos de aceites
L	Targhetta rotazione	Rotation plate	Plaque rotation	Drehungsschild	Placa sentido de giro
M	Golfaro di sollevamento	Lifting eyebolt	Anneau de levage	Aufhebenösenschraube	Gancho de levantamiento
N	Zavorratore	Gas ballast valve	Lest d'air	Gasballastventil	Valvula gas-ballast
O	Targhetta superfici calde	Hot surfaces name plate	Plaque surfaces chaudes	Typenschild für warme Fläche	Placa superficies calientes
P	Antivibranti	Vibration damper	Pied antivibratoire	Schwingungsdämpfer	Antivibrante
Q	Filtro olio	Oil filter	Filtre huile	Ölfilter	Filtro de aceite


Technical data and parts lists

ENG

		EU160		EU160/B	
Portata nominale* Nominal speed* Débit nominal* Nennsaugvermögen* Caudal nominal*	m³/h	50Hz	152		
		60Hz	182		
Pressione finale*(assoluta) Ultimate pressure* (abs.) Pression limite* (abs.) Enddruck* (abs.) Presión final* (abs.)	mbar	0,5		10	
	Pascal	50		1000	
Potenza motore # / Numero di giri Motor power # / Rotational speed Puissance moteur # / Numéro de révolutions Motorleistung # / Drehzahl Potencia motor # / Velocidad de giro	kW	50Hz ~3	3		
	min ⁻¹		1500		
	kW	60Hz ~3	4		
	min ⁻¹		1800		
Caratteristiche motore elettrico Electric motor characteristics Caractéristiques moteur électrique Motoreigenschaften Características motor eléctrico	dB(A) EN ISO 2151	50Hz ~3	IM B5 230/400 V ±10%		
		60Hz ~3	IM B5 275/480 V ±10%		
Livello di pressione acustica Sound pressure level Niveau de pression acoustique Schalldruckpegel Nivel de presión acústica	dB(A) EN ISO 2151	50Hz	71		
		60Hz	72		
Pressione massima vapore H ₂ O ammissibile Water vapour tolerance Pression de vapeur d'eau maximale admissible Wasserdampfverträglichkeit Presión máxima de vapor de agua admisible	mbar	30			
Quantità vapore H ₂ O ammissibile Water vapour pumping capacity Capacité de pompage de la vapeur d'eau Wasserdampfkapazität Cantidad de vapor de agua admisible	kg/h	3			
Carica olio Oil capacity Charge d'huile Öfüllmenge Carga de aceite	l	3			
Peso totale / senza motore Total weight / Without motor Poids total / Sans moteur Gesamtgewicht / Gewicht ohne Motor Peso total / Sin motor	kg	50Hz	104 / 75		
		60Hz	110 / 75		
*Secondo accordi PNEUROP 6602. *According to PNEUROP standard 6602. *Selon la norme PNEUROP 6602. *Nach der PNEUROP Norm 6602. *Según la normativa PNEUROP 6602.		#Valido per temperature fino a 40°C e altitudini inferiori a 1000 m. #Valid for temperatures up to 40°C and altitudes lower than 1000 m. #Valable pour températures jusqu'à 40°C et pour altitudes inférieures à 1000 m. #Gültig für Temperaturen bis 40°C und für Höhen weniger als 1000 m. #Válido para temperaturas hasta 40°C y altitudes inferiores a 1000 m.			



*Secondo accordi PNEUROP 6602.
*According to PNEUROP standard 6602.
*Selon la norme PNEUROP 6602.
*Nach der PNEUROP Norm 6602.
*Según la normativa PNEUROP 6602.

#Valido per temperature fino a 40°C e altitudini inferiori a 1000 m.
#Valid for temperatures up to 40°C and altitudes lower than 1000 m.
#Valable pour températures jusqu'à 40°C et pour altitudes inférieures à 1000 m.
#Gültig für Temperaturen bis 40°C und für Höhen weniger als 1000 m.
#Válido para temperaturas hasta 40°C y altitudes inferiores a 1000 m.

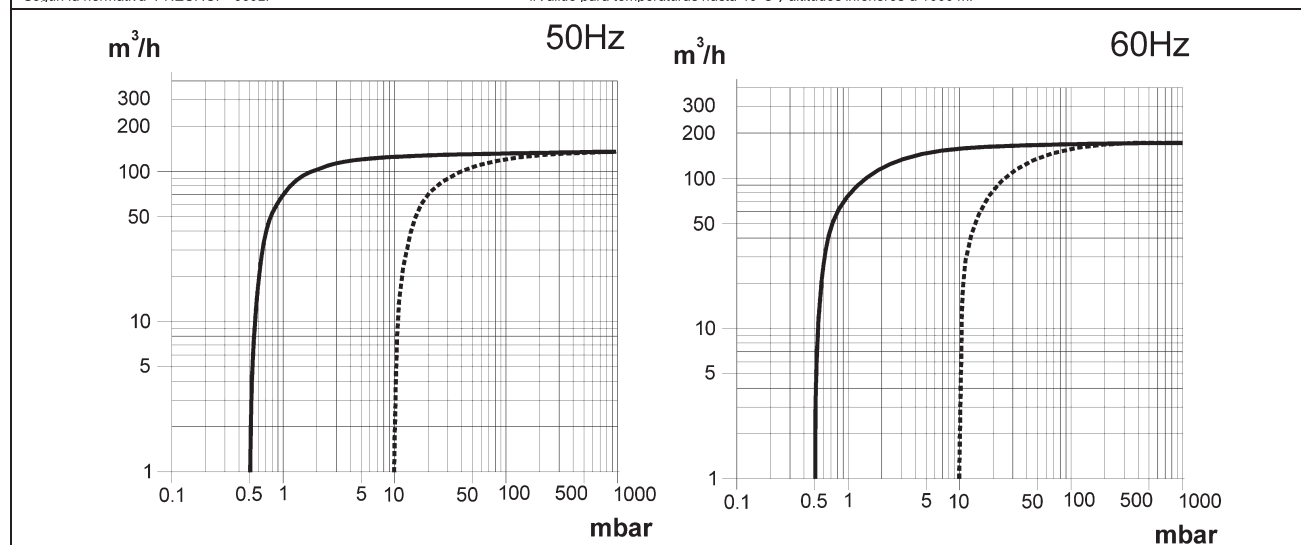

Technical data and parts lists

ENG

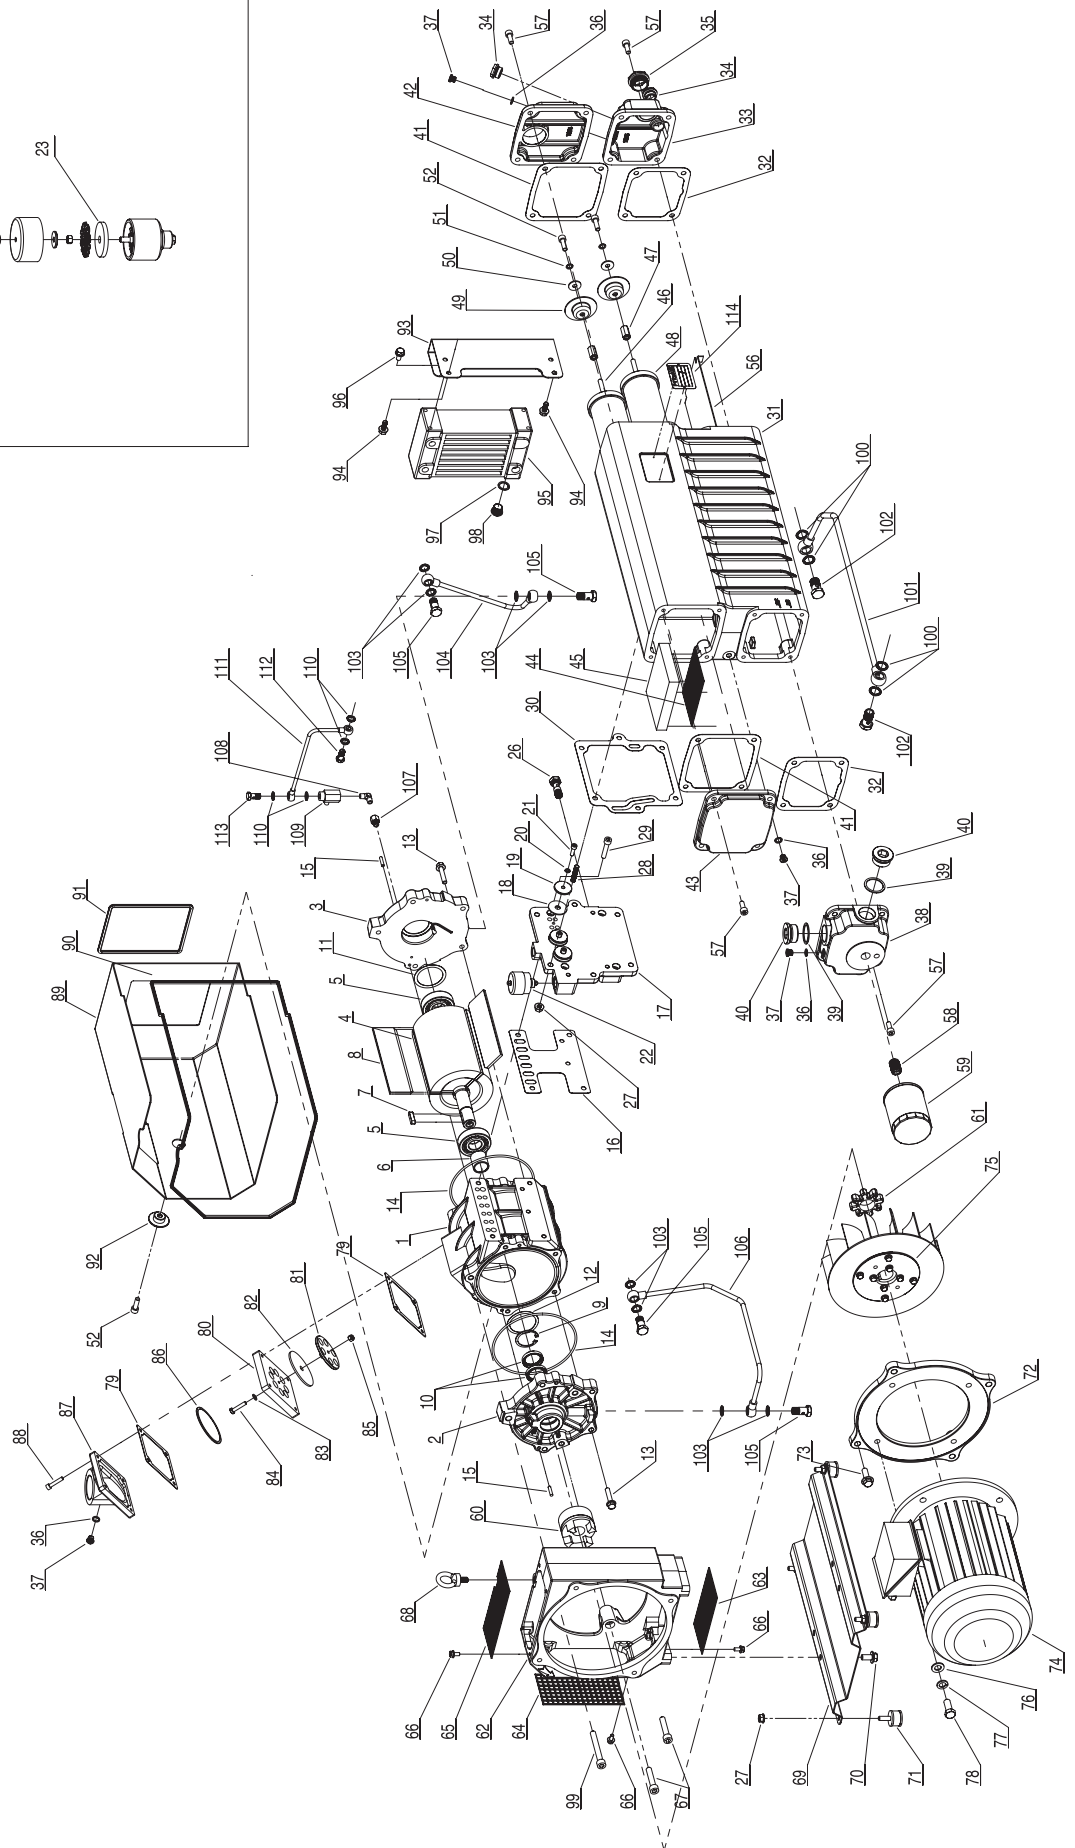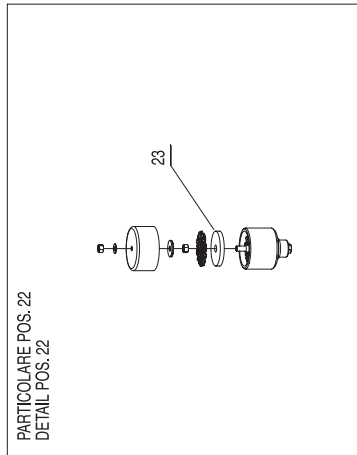

POS.		DESCRIPTION	Quantità
1		Body of pump	1
2		Motor side cover	1
3		External side cover	1
4		Rotor	1
5		6305 Bearing	2
6		LR 25x30x30 Ring	1
7		8x7x30 Key	1
8		Vane	3
9		Seeger	1
10	G	BABSL 30x40x7 Seal ring	2
11		Space washer	1
12		Shim ring	1
13		M8x40 Hex Screw flanged and knurled	9
14		4625 O-Ring	2
15		5x24 Pin	4
16	G	Body of pump-spacer gasket	1
17		Pump-tank spacer	1
18		Ø36/10x2 Rubber disk	3
19		Support valve disk	3
20		D6 elastic washer	3
21		M6x20 Hex.Socket Head Screw	3
22		3/8"G Gas ballast valve	1
23	R	Gas ballast felt disk	1
26		1/4"G Screw with non return valve	1
27		M8 Nut flanged and knurled	10
28		M8x40 Hexagon socket stud bolt	6
29		M8x40 Hexagon socket head screw	4
30	G	Spacer-Tank gasket	1
31		Tank	1
32	G	Lower tank cover gasket	2
33		External side lower tank cover	1
34		1/2"G Filling-discharge plug	2
35		1" oil sight glass	1
36		1/8"G Al washer	4
37		1/8"G Hexagon socket head plug	4
38		Motor side lower tank cover	1
39		1"G Al washer	2
40		1"G Hexagon socked head plug	2
41	G	Upper tank cover gasket	2
42		External side upper tank cover	1
43		Motor side upper tank cover	1
44		Demister-tank support mesh	1
45		Tank demister	1
46		Stay bolt for exhaust filter	2
47		Stay bolt sleeve	2
48	R	Exhaust filter	2
49		Disk for exhaust filter	2
50		D.8 washer	2
51		Ø8.4/13x1 Al washer	2
52		M8x25 Hex Socket head screw	3
56		Tank micro-stretched sheet	1
57		M8x20 Hex Socket head screw	16
58		UNF 3/4"-16 Nipple	1
59		Oil filter	1
60		Pump side coupling half	1
61	R	Elastic coupling insert	1
62		Fan cover sleeve	1
63		Sleeve lower safety mesh	1
64		Sleeve side safety mesh	1

Technical data and parts lists

ENG

POS.		DESCRIPTION	Quantità
65		Sleeve upper safety mesh	1
66		M6 x 12 Hex. screw flanged and knurled	12
67		M10x50 Hex socket head screw	2
68		M10 Eyebolt	1
69		Base-plate	1
70		M10x20 Hexagon screw flanged and knurled	4
71		Vibration damping foot	4
72		Motor flange	1
73		M10x30 Hexagon screw flanged and knurled	4
74		Electric motor	1
75		Fan assembly	1
76		D.12 washer	4
77		D.12 elastic washer	4
78		M12x60 Hexagon screw	4
79	G	Inlet gasket	2
80		Inlet valve body	1
81		Support valve disk	1
82	G	Rubber disk	1
83		D.6 washer	1
84		M6x30 Hex. screw	1
85		Nylon locknut	1
86		Inlet filtering baffle	1
87		Inlet port	1
88		M6x30 Hexagon socket head screw	4
89		Casing	1
90		Casing sheath	1
91		Casing window sheath	1
92		Disk for casing	1
93		Oil cooler support	1
94		M8x20 Hex. screw flanged and knurled	4
95		Air/oil cooler	1
96		M8x16 Hex. screw flanged and knurled	4
97		3/8"G Al washer	2
98		3/8"G Hexagon socket head plug	2
99		M10x80 Hex socket head screw	1
100		3/8"Gas Cu washer	4
101		Oil cooler inlet pipe	1
102		3/8"G Hollow bolt	2
103		1/4"Gas Cu washer	8
104		External side oil pipe	1
105		Screw for 1/4"G fitting	4
106		Motor side oil pipe	1
107		A5 M-F 1/8" - 1/8" Extension	1
108		M-M 1/8"G Elbow	1
109		F-F 1/8"G valve	1
110		1/8"Gas Cu washer	4
111		Oil recovery pipe	1
112		1/8"G Hollow bolt	1
113		Screw for 1/8" fitting for B version	1
114		Pump name plate	1




PVR Srl **SEDE LEGALE E AMMINISTRATIVA:**
Via Santa Vecchia, 107 - 23868 Valmadrera (LC), Italy
T +39 0341 1918 51 - F +39 0341 1918 599
info@pvr.it - www.pvr.it

UNITÀ LOCALE:
Via IV Novembre, 104F
23868 Valmadrera (LC), Italy

EU 160 HWT

*Lubricated vane
vacuum pump*

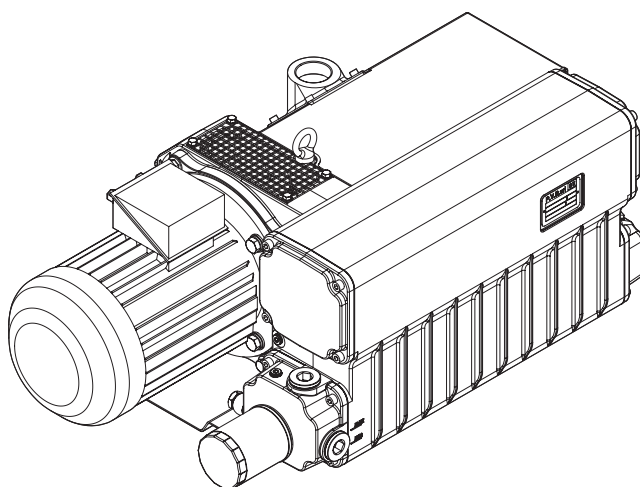


Technical data and parts lists

Publication Number:
RDT 4560.00 December 2018

Technical data and parts lists

ENG

EU 160 HWT

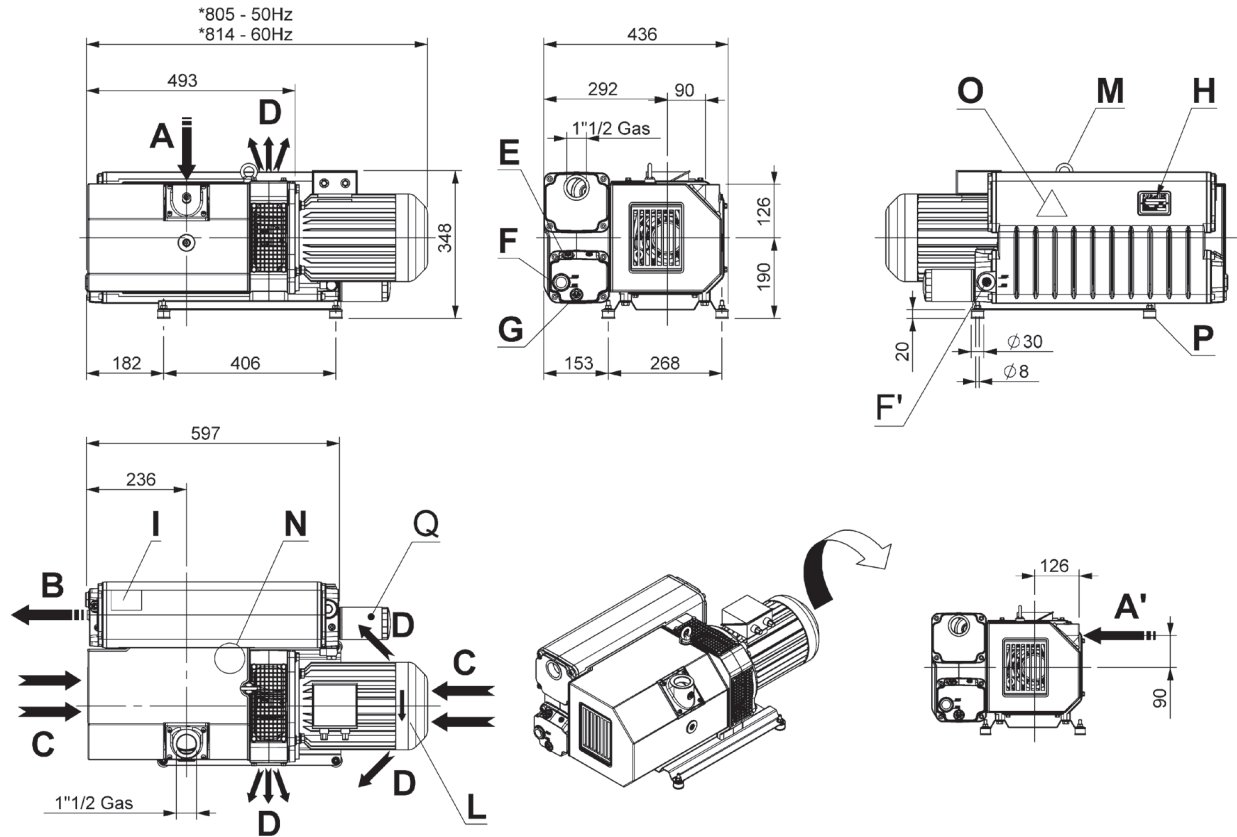


*Misure soggette a variazioni in funzione della marca del motore
 *Dimensions subject to changes depending on the motor brand
 *Données sujettes aux variations en fonction de la marque du moteur
 *Die Maße können aufgrund von Motorzeichen ändern
 *Medidas sujetas a variación en función de la marca del motor

	I	GB	F	D	E
A	Aspirazione verticale	Vertical inlet	Aspiration verticale	Senkrechter Einlass	Aspiración vertical
A'	Aspirazione orizzontale	Horizontal inlet	Aspiration horizontale	Waagerechter Einlass	Aspiración horizontal
B	Scarico aria	Exhaust	Sortie de l'air	Luftauslass	Salida de aire
C	Entrata aria raffreddamento	Cooling air inlet	Entrée air refroidissement	Kühlluftseintritt	Entrada aire refrigeración
D	Uscita aria raffreddamento	Cooling air outlet	Sortie air refroidissement	Kühlluftaustritt	Salida aire refrigeración
E	Tappo carico olio	Oil filling plug	Bouchon remplissage huile	Öleinfüllschraube	Tapón carga de aceite
F-F'	Spia livello olio	Oil level sight glass	Voyant niveau huile	Ölschauglas	Mirilla aceite
G	Tappo scarico olio	Oil drain plug	Bouchon vidange huile	Ölablass-Schraube	Tapón vaciado de aceite
H	Targhetta identificazione	Pump name plate	Plaquette d'identification	Maschinenschild	Placa de identificación
I	Targhetta oli	Oil grade label	Plaquette huiles	Ölempfehlungsschild	Placa tipos de aceites
L	Targhetta rotazione	Rotation plate	Plaquette rotation	Drehungsschild	Placa sentido de giro
M	Golfaro di sollevamento	Lifting eyebolt	Anneau de levage	Aufhebenöschraube	Gancho de levantamiento
N	Zavorratore	Gas ballast valve	Lest d'air	Gasballastventil	Valvula gas-ballast
O	Targhetta superfici calde	Hot surfaces name plate	Plaquette surfaces chaudes	Typenschild für warme Fläche	Placa superficies calientes
P	Antivibranti	Vibration damper	Pied antivibratoire	Schwingungsdämpfer	Antivibrante
Q	Filtro olio	Oil filter	Filtre huile	Ölfilter	Filtro de aceite


EU 160 HWT		
Portata nominale* Nominal speed* Débit nominal* Nennsaugvermögen* Caudal nominal*	m ³ /h	50Hz 152 60Hz 182
Pressione finale*(assoluta) Ultimate pressure* (abs.) Pression limite* (abs.) Enddruck* (abs.) Presión final* (abs.)	mbar	0,8
	Pascal	80
Potenza motore # / Numero di giri Motor power # / Rotational speed Puissance moteur # / Numéro de révolutions Motorleistung # / Drehzahl Potencia motor # / Velocidad de giro	kW min⁻¹ kW min⁻¹	50Hz ~3 3 1500 60Hz ~3 4 1800
Caratteristiche motore elettrico Electric motor characteristics Caractéristiques moteur électrique Motoreigenschaften Características motor eléctrico		50Hz ~3 IM B5 230/400 V ±10% 60Hz ~3 IM B5 275/480 V ±10%
Livello di pressione acustica Sound pressure level Niveau de pression acoustique Schalldruckpegel Nivel de presión acústica	dB(A) EN ISO 2151	50Hz 71 60Hz 72
Pressione massima vapore H ₂ O ammissibile Water vapour tolerance Pression de vapeur d'eau maximale admissible Wasserdampfverträglichkeit Presión máxima de vapor de agua admisible	mbar	80
Quantità vapore H ₂ O ammissibile Water vapour pumping capacity Capacité de pompage de la vapeur d'eau Wasserdampfkapazität Cantidad de vapor de agua admisible	kg/h	9
Carica olio Oil capacity Charge d'huile Öfüllmenge Carga de aceite	l	3
Peso totale / senza motore Total weight / Without motor Poids total / Sans moteur Gesamtgewicht / Gewicht ohne Motor Peso total / Sin motor	kg	50Hz 104 / 75 60Hz 110 / 75

*Secondo accordi PNEUROP 6602.
*According to PNEUROP standard 6602.
*Selon la norme PNEUROP 6602.
*Nach der PNEUROP Norm 6602.
*Según la normativa PNEUROP 6602.


#Valido per temperature fino a 40°C e altitudini inferiori a 1000 m.
#Valid for temperatures up to 40°C and altitudes lower than 1000 m.
#Valable pour températures jusqu'à 40°C et pour altitudes inférieures à 1000 m.
#Gültig für Temperaturen bis 40°C und für Höhen weniger als 1000 m.
#Válido para temperaturas hasta 40°C y altitudes inferiores a 1000 m.

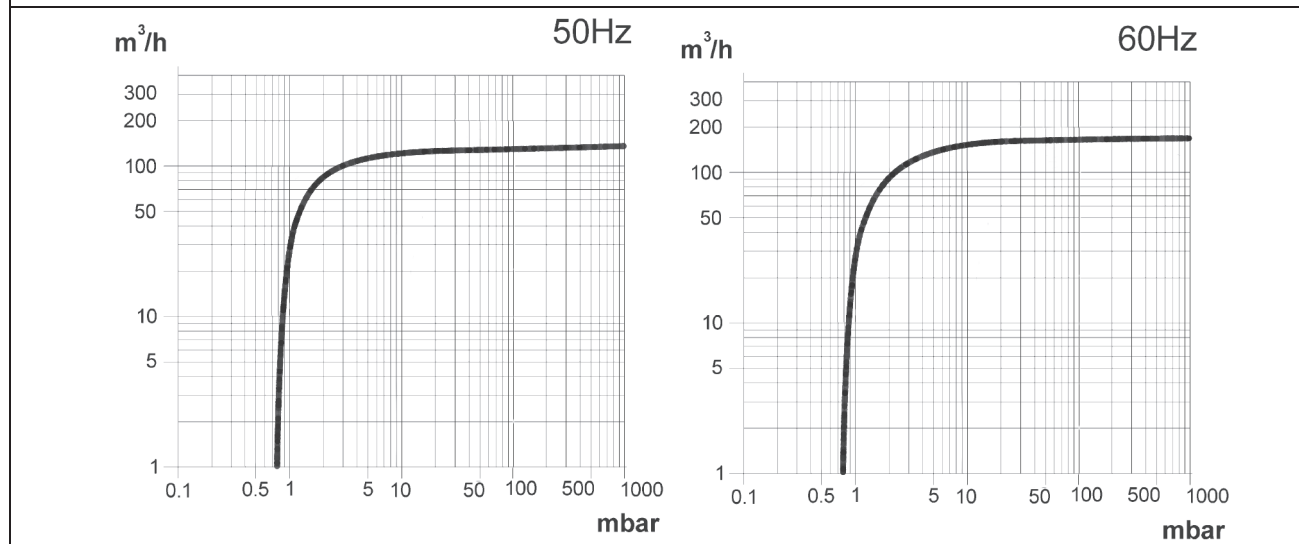

Technical data and parts lists ENG

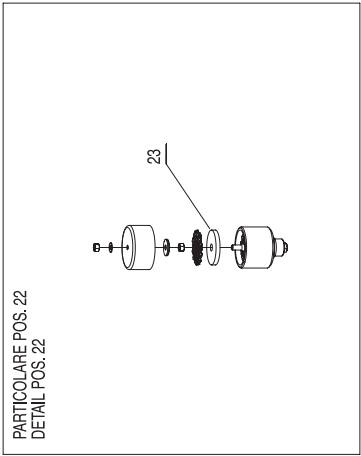

PARTICOLARE POS. 22
DETAIL POS. 22

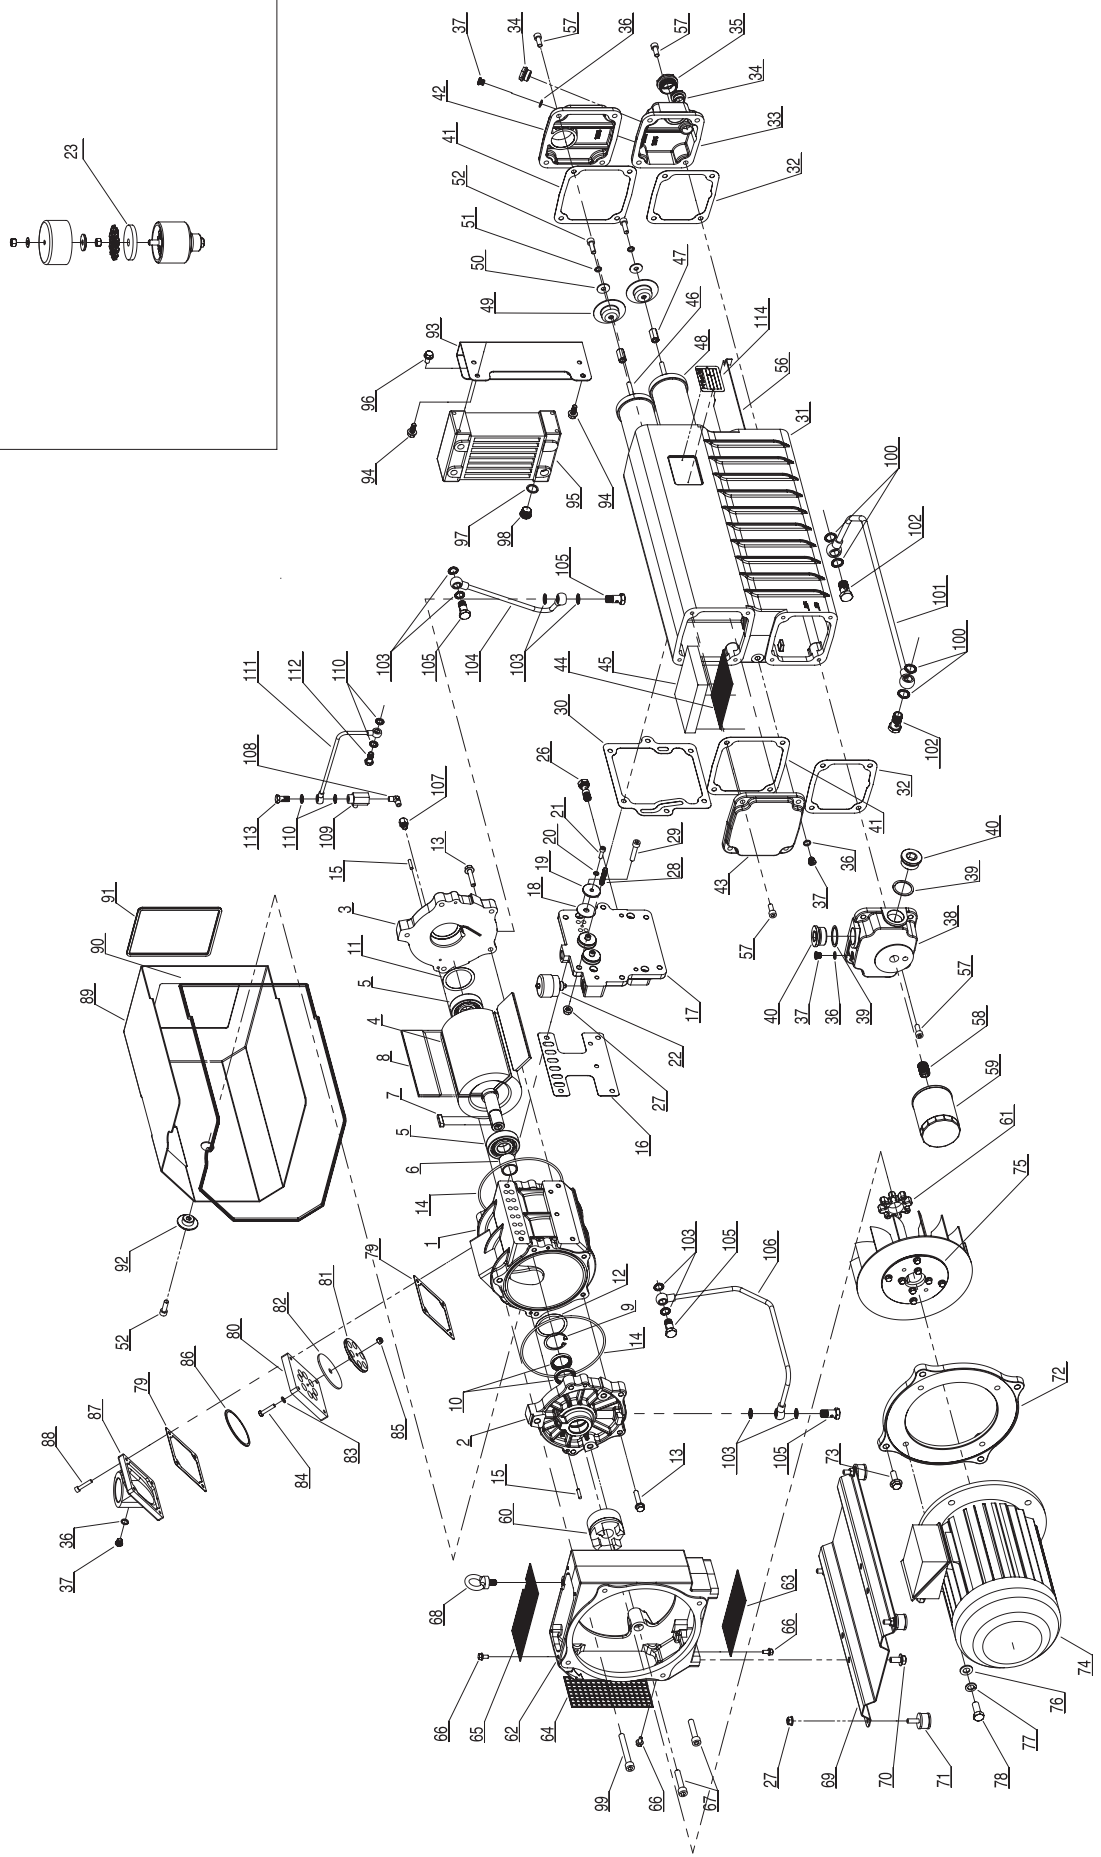

POS.		DESCRIPTION	Quantità
1		Body of pump	1
2		Motor side cover	1
3		External side cover	1
4		Rotor	1
5		6305 Bearing	2
6		LR 25x30x30 Ring	1
7		8x7x30 Key	1
8		Vane	3
9		Seeger	1
10	G	BABSL 30x40x7 Seal ring	2
11		Space washer	1
12		Shim ring	1
13		M8x40 Hex Screw flanged and knurled	9
14		4625 O-Ring	2
15		5x24 Pin	4
16	G	Body of pump-spacer gasket	1
17		Pump-tank spacer	1
18		Ø36/10x2 Rubber disk	3
19		Support valve disk	3
20		D6 elastic washer	3
21		M6x20 Hex.Socket Head Screw	3
22		3/8"G Gas ballast valve	1
23	R	Gas ballast felt disk	1
26		1/4"G Screw with non return valve	1
27		M8 Nut flanged and knurled	10
28		M8x40 Hexagon socket stud bolt	6
29		M8x40 Hexagon socket head screw	4
30	G	Spacer-Tank gasket	1
31		Tank	1
32	G	Lower tank cover gasket	2
33		External side lower tank cover	1
34		1/2"G Filling-discharge plug	2
35		1" oil sight glass	1
36		1/8"G Al washer	4
37		1/8"G Hexagon socket head plug	4
38		Motor side lower tank cover	1
39		1"G Al washer	2
40		1"G Hexagon socked head plug	2
41	G	Upper tank cover gasket	2
42		External side upper tank cover	1
43		Motor side upper tank cover	1
44		Demister-tank support mesh	1
45		Tank demister	1
46		Stay bolt for exhaust filter	2
47		Stay bolt sleeve	2
48	R	Exhaust filter	2
49		Disk for exhaust filter	2
50		D.8 washer	2
51		Ø8.4/13x1 Al washer	2
52		M8x25 Hex Socket head screw	3
56		Tank micro-stretched sheet	1
57		M8x20 Hex Socket head screw	16
58		UNF 3/4"-16 Nipple	1
59		Oil filter	1
60		Pump side coupling half	1
61	R	Elastic coupling insert	1
62		Fan cover sleeve	1
63		Sleeve lower safety mesh	1
64		Sleeve side safety mesh	1

Technical data and parts lists

ENG

POS.		DESCRIPTION	Quantità
65		Sleeve upper safety mesh	1
66		M6 x 12 Hex. screw flanged and knurled	12
67		M10x50 Hex socket head screw	2
68		M10 Eyebolt	1
69		Base-plate	1
70		M10x20 Hexagon screw flanged and knurled	4
71		Vibration damping foot	4
72		Motor flange	1
73		M10x30 Hexagon screw flanged and knurled	4
74		Electric motor	1
75		Fan assembly	1
76		D.12 washer	4
77		D.12 elastic washer	4
78		M12x60 Hexagon screw	4
79	G	Inlet gasket	2
80		Inlet valve body	1
81		Support valve disk	1
82	G	Rubber disk	1
83		D.6 washer	1
84		M6x30 Hex. screw	1
85		Nylon locknut	1
86		Inlet filtering baffle	1
87		Inlet port	1
88		M6x30 Hexagon socket head screw	4
89		Casing	1
90		Casing sheath	1
91		Casing window sheath	1
92		Disk for casing	1
93		Oil cooler support	1
94		M8x20 Hex. screw flanged and knurled	4
95		Air/oil cooler	1
96		M8x16 Hex. screw flanged and knurled	4
97		3/8"G Al washer	2
98		3/8"G Hexagon socket head plug	2
99		M10x80 Hex socket head screw	1
100		3/8"Gas Cu washer	4
101		Oil cooler inlet pipe	1
102		3/8"G Hollow bolt	2
103		1/4"Gas Cu washer	8
104		External side oil pipe	1
105		Screw for 1/4"G fitting	4
106		Motor side oil pipe	1
107		A5 M-F 1/8" - 1/8" Extension	1
108		M-M 1/8"G Elbow	1
109		F-F 1/8iG valve	1
110		1/8"Gas Cu washer	4
111		Oil recovery pipe	1
112		1/8"G Hollow bolt	1
113		Screw for 1/8" fitting for B version	1
114		Pump name plate	1



PVR Srl **SEDE LEGALE E AMMINISTRATIVA:**
Via Santa Vecchia, 107 - 23868 Valmadrera (LC), Italy
T +39 0341 1918 51 - F +39 0341 1918 599
info@pvr.it - www.pvr.it

UNITÀ LOCALE:
Via IV Novembre, 104F
23868 Valmadrera (LC), Italy